

FIRE & EMERGENCY

Signage available
in a full range of
metal material

MW > Metal White

SB > Silver Brushed

BB > Brass Brushed

SP > Silver Polished

BP > Brass Polished

Metal plates any standard finish - All for one low price.

Code
Compliant

Size 6 X 6



FMS-66-01



FMS-66-02



FMS-66-03



FMS-66-08

Size 6 x 6



FMS-66-09



FP1-66-04



FP1-66-05



FP2-66-NY

Size 6 x 6



FP2-66-06



FP2-66-07 > Size 6 x 6



FMS-96-10 > Size 9 x 6

Size 9 x 6



FMCS-96-32



FMCS-96-33

Tough Sign Construction
Perma-bond layers.



Metal Plates

- > Aluminum substrate is highly durable and provides a smooth slim profile when installed.
- > A thickness of 0.025" with a baked white, brushed or polished enamel finish.
- > Vandal resistant sub-surface heat baked graphics.

Easy-Mount Signs

Quickly and easily "peel and stick", no tools or hardware required. Our adhesive backing is as strong as the surface they're adhered to.

Metal
Plates
Any Finish
All One Low
Price.

FIRE & EMERGENCY

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

- Turn fire switch to "ON" position
- Press desired floor button
- Press and hold "DOOR CLOSE" button to close doors
- Press and hold "DOOR OPEN" button to open doors
- Press "CALL CANCEL" button to cancel call



FCS-66-11

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

- Turn Fire Switch to "ON" Position
- Press Desired Floor Button
- Press and Hold "DOOR CLOSE" Button to Close Doors
- Press and Hold "DOOR OPEN" Button to Open Doors
- Press "CALL CANCEL" Button to Cancel Call
- Turn Key to "HOLD" to Hold Elevator at Floor



FCS-66-12

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

KEY OFF:
Normal Elevator Operation

KEY ON:
Places Elevator in Emergency Service

- Push Button for Floor Desired
- Hold "DOOR CLOSE" Button Until Doors Close and Car Starts
- To Open Doors Apply Continuous Pressure to "DOOR OPEN" Button
- Push "RESET" Button to Cancel Call



FCS-66-13

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

KEY OFF:
Normal Elevator Operation

KEY ON:
Places Elevator in Emergency Service

- Push Button for Floor Desired
- Hold "DOOR CLOSE" Button Until Doors Close and Car Starts
- To Open Doors Apply Continuous Pressure to "DOOR OPEN" Button
- Cancel Call Momentarily, Press "DOOR OPEN" Button



FCS-66-14

Size 6 x 6

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

KEY OFF:
Normal Elevator Operation

KEY ON:
Places Elevator in Emergency Service

- Push Button for Floor Desired
- Doors Close Automatically
- To Open Doors Apply Continuous Pressure to "DOOR OPEN" Button



FCS-66-18

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

KEY OFF:
Normal Elevator Operation

KEY ON:
Places Elevator in Emergency Service

- Push Button for Floor Desired
- Hold "DOOR CLOSE" Button Until Doors Close and Car Starts
- To Open Doors Apply Continuous Pressure to "DOOR OPEN" Button



FCS-66-17

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

KEY OFF:
Normal Elevator Operation

KEY ON:
Places Elevator in Emergency Service

- Push Button for Floor Desired
- Press and Hold "DOOR OPEN" Button to Open Doors
- Press "CALL CANCEL" Button to Cancel Call
- Turn Key "OFF" to Allow Automatic Return to Intending Landing
- Turn Key to "HOLD" to Hold Elevator at Floor



FCS-66-15

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

KEY OFF:
Normal Elevator Operation

KEY ON:
Places Elevator in Emergency Service

- Push Button for Floor Desired
- Hold "DOOR CLOSE" Button to Close Door
- To Open Doors Apply Continuous Pressure to "DOOR OPEN" Button
- Key is Illuminated in All 5 Positions



FCS-66-16

Size 6 x 6

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

TO USE ELEVATOR:

- Turn Fire Switch to "ON" Position
- Push Button for Floor Desired
- Press "DOOR CLOSE" Button to Close Doors
- Press "DOOR OPEN" Button to Open Doors
- Turn Fire Switch to "OFF" Position to Release Elevator



FCS-66-22

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

KEY OFF:
Normal Elevator Operation

KEY ON:
Places Elevator in Emergency Service

- To Close Doors Apply Continuous Pressure to "DOOR CLOSE" Button
- Push Button for Floor Desired
- To Open Doors Apply Continuous Pressure to "DOOR OPEN" Button



FCS-66-21

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

KEY OFF:
Normal Elevator Operation

KEY ON:
Places Elevator in Emergency Service

- To Close Doors Apply Continuous Pressure to "DOOR CLOSE" Button
- Push Button for Floor Desired
- Push "START" Button
- To Open Doors Apply Continuous Pressure to "DOOR OPEN" Button



FCS-66-20

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

KEY OFF:
Normal Elevator Operation

KEY ON:
Places Elevator in Emergency Service

- Push Button for Floor Desired
- Hold "DOOR OPEN" Button to Close Door
- To Open Doors Apply Continuous Pressure to "DOOR OPEN" Button



FCS-66-19

Size 6 x 6

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

- Turn Fire Switch to "ON" Position
- Manually Close Gate and Doors
- Press "CALL CANCEL" Button to Cancel Call
- Manually Open Gate and Doors
- Turn Key "OFF" to Allow Automatic Return to Intending Landing
- Turn Key to "HOLD" to Hold Elevator at Floor



FCS-66-26

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

KEY OFF:
Normal Elevator Operation

KEY ON:
Places Elevator in Emergency Service

- Push Button for Floor Desired



FCS-66-25

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

- Turn Fire Switch to "ON" Position
- Press Desired Floor Button
- Press and Hold "DOOR CLOSE" Button to Close Doors
- Press and Hold "DOOR OPEN" Button to Open Doors
- Press "CALL CANCEL" Button to Cancel Call
- Turn Key "OFF" to Allow Automatic Return to Intending Landing
- Turn Key to "HOLD" to Hold Elevator at Floor



FCS-66-24

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

KEY OFF:
Normal Elevator Operation

KEY ON:
Places Elevator in Emergency Service

- Push Button for Floor Desired
- Hold "DOOR CLOSE" Button Until Doors Close and Car Starts
- To Open Doors Apply Continuous Pressure to "DOOR OPEN" Button



FCS-66-23

Size 6 x 6

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

KEY OFF:
Normal Elevator Operation

KEY ON:
Places Elevator in Emergency Service

- Push Button for Floor Desired
- Doors Close Automatically
- To Open Doors Apply Continuous Pressure to "DOOR OPEN" Button

KEY BY-PASS:
Key Continuous Pressure to Key if Car Falls to Start after Pressing Button to Return to Main Floor



FCS-96-28

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

- Turn Fire Switch to "ON" Position
- Press Desired Floor Button
- Press and Hold "DOOR CLOSE" Button Until Doors Close and Car Starts
- Press and Hold "DOOR OPEN" Button to Open Doors
- Press "CALL CANCEL" Button to Cancel Call
- Turn Key "OFF" to Allow Automatic Return to Intending Landing
- Turn Key to "HOLD" to Hold Elevator at Floor



FCS-66-27

Size 6 x 6

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

KEY ON:
Cancel False Calls-Press "CANCEL" Button

- Press Desired Floor Button to Start
- Close Door - Constant Pressure on "DOOR CLOSE" Button
- Open Door - Constant Pressure on "OPEN DOOR" Button

KEY HOLD:
Holds Car at Floor with Doors Open

KEY OFF:
Return to Designated Landing if Phase 1 Active

- Phase 1 Off, to Restore Normal Service You Must Return to Designated Landing



FCS-69-31

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

KEY OFF:
Normal Elevator Operation

KEY ON:
Places Elevator in Emergency Service

- Push Button for Floor Desired
- Hold "DOOR CLOSE" Button to Close Door
- Push Designated Button to Open Doors Apply Continuous Pressure to "DOOR OPEN" Button

KEY HOLD:
Remains at Floor with Doors Open



FCS-96-30

FIRE OR EMERGENCY ELEVATOR OPERATION

ELEVATOR CAR STATION

KEY OFF:
Normal Elevator Operation

KEY ON:
Places Elevator in Emergency Service

- Push Button for Floor Desired
- When Doors are Closing and Call is in Motion Press "DOOR OPEN" Button

KEY HOLD:
Elevator Remains at Floor with Doors Open Until After Pressing Button to Return to Main Floor



FCS-96-29

Size 9 x 6